

# UPDATE YOUR ENERGY DISPLAY FOR WINTER TIME-OF-USE (TOU) RATES

NEW TIME-OF-USE (TOU) RATES AND PERIODS  
EFFECTIVE NOVEMBER 1, 2014.



Winter-Weekdays  
(November 1 - April 30)



Weekends  
& Holidays

Prices effective November 1, 2014

- 7.7** ¢/kWh Off-Peak
- 11.4** ¢/kWh Mid-Peak
- 14.0** ¢/kWh On-Peak

## FOLLOW THESE SIMPLE STEPS TO CHANGE THE TIME-OF-USE (TOU) ELECTRICITY RATES AND PERIODS PROGRAMMED IN YOUR ENERGY DISPLAY.

<p>1. Press and hold PROG/SYNC until the Display Unit beeps once (about 3 seconds) and enters Setup mode. The hours start flashing.</p>	
<p>2. Press and release PROG/SYNC to advance through the time, day, temperature and power factor settings. Then use ▲ or ▼ to select 3-Peak. Press PROG/SYNC to advance to the next setting.</p>	
<p>3. Press ▲ or ▼ until SAT &amp; SUN start flashing. This indicates that Saturday and Sunday will be programmed at Off-Peak rates. Press PROG/SYNC to advance to the next setting.</p> <p><b>Note:</b> Statutory Holidays are also Off-Peak but cannot be programmed as such in the Display Unit.</p>	
<p>4. Use ▲ or ▼ to set the current Off-Peak rate to 7.7 ¢/kWh. Press PROG/SYNC to advance to the next setting.</p>	
<p>5. Use ▲ or ▼ to set the current Mid-Peak rate to 11.4 ¢/kWh. Press PROG/SYNC to advance to the next setting.</p>	
<p>6. Use ▲ or ▼ to set the current On-Peak rate to 14.0 ¢/kWh. Press PROG/SYNC to advance to the next setting.</p>	

<p>7. Number “1” is displayed above the clock, indicating the 1st time slot. This rate period is On-Peak. Use ▲ or ▼ to set the start time of Peak 1 to begin at 7:00am. Press PROG/SYNC to advance to the next setting.</p>	
<p>8. Use ▲ or ▼ to set the rate period to “On-Peak”. Press PROG/SYNC to advance to the next setting.</p>	
<p>9. Number “2” is displayed above the clock, indicating the 2nd time slot. This rate period is Mid-Peak. Use ▲ or ▼ to set the start time of Peak 2 to begin at 11:00am. Press PROG/SYNC to advance to the next setting.</p>	
<p>10. Use ▲ or ▼ to set the rate period to “Mid-Peak”. Press PROG/SYNC to advance to the next setting.</p>	
<p>11. Number “3” is displayed above the clock, indicating the 3rd time slot. This rate period is On-Peak. Use ▲ or ▼ to set the start time of Peak 3 to begin at 5:00pm. Press PROG/SYNC to advance to the next setting.</p>	
<p>12. Use ▲ or ▼ to set the rate period to “On-Peak”. Press PROG/SYNC to advance to the next setting.</p>	
<p>13. Number “4” is displayed above the clock, indicating the 4th time slot. This rate period is Off-Peak. Use ▲ or ▼ to set the start time of Peak 4 to begin at 7:00pm. Press PROG/SYNC to advance to the next setting.</p>	
<p>14. Use ▲ or ▼ to set the rate period to “Off-Peak”.</p>	
<p>15. Press and hold the PROG/SYNC button for 2-3 seconds (until 1 beep is heard) to exit setup mode. This will return the Energy Display to its home screen. Verify that the correct TOU period is being displayed on the middle row corresponding with the current time of day.</p>	

FOR QUESTIONS REGARDING YOUR ENERGY  
DISPLAY, PLEASE CALL

**1-866-813-2226**