





HOW TO ADJUST YOUR ENERGY DISPLAYS INTERNAL CLOCK



Your Display Unit has three buttons you will use during setup: the ▲ and ▼ buttons on the front of the unit, and the PROG/SYNC button on top.

- The ▲ and ▼ buttons allow you to change the settings programmed in your Display Unit.
- Press and release PROG/SYNC to advance to the next setting while in Setup mode.

Follow these simple steps to change the internal clock in your In-Home Energy Display:

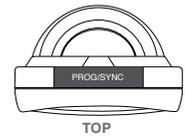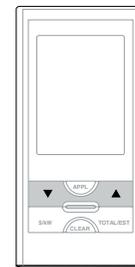

<p>1. Press and hold PROG/SYNC until the Display Unit beeps once (about 3 seconds) and enters Setup mode. The hours start flashing.</p>	
<p>2. Press ▲ or ▼ to enter the current hour of the day. Press PROG/SYNC to advance to the next setting.</p>	
<p>3. Press ▲ or ▼ to enter the current minute of the day. Press PROG/SYNC to advance to the next setting.</p>	
<p>4. Enter the clock format you wish to use. Pressing ▲ or ▼ toggles between 12 hour and 24 hour time display format.</p>	
<p>5. Press and hold the PROG/SYNC button for 2-3 seconds (until 1 beep is heard) to exit Setup mode.</p>	

FOR QUESTIONS REGARDING YOUR ENERGY DISPLAY, PLEASE CALL

1-866-813-2226