



Summer is over!

Now it's time to adjust your thermostat from Cool to Heat.



Step 1. Open the door and press the “**SYSTEM**” button until the word “**HEAT**” is in the upper right corner of the display.



Step 2. The display will change to “**HEAT**”. Set the temperature to your desired temperature (higher than the current room temperature). You will hear a faint “click” and the heat will come on.

Note: on some systems there could be a 10-15 minute delay. Once you hear the fan running, you should feel warm air at the vent.

Additional troubleshooting tips:

- Press SYSTEM to set the system to HEAT. Make sure the temperature is set higher than the inside temperature.
- Check circuit breaker and reset if necessary.
- Make sure power switch at heating and cooling system is on.
- Make sure furnace door is closed securely.

If after these steps the heating does not come on, (could take anywhere from 5 to 10 minutes) please contact a representative at **1-866-813-2226**.

