





Summer is over!

Now it's time to adjust your thermostat from Cool to Heat.

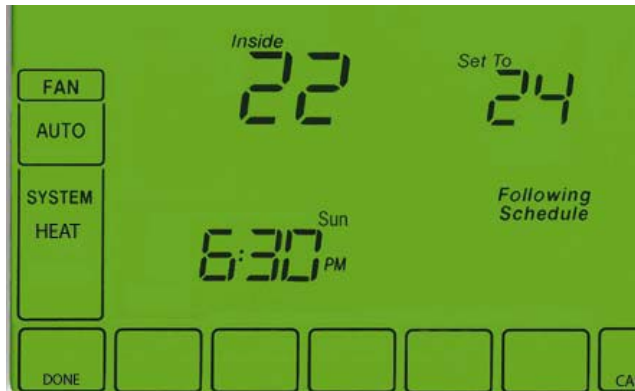

Step 1.

Press the **“SYSTEM”** button until the word **“HEAT”** is flashing. Then press **“DONE”** (lower left square changes from **“SCHED”** to **“DONE”**). The **“HEAT”** will stop flashing.)

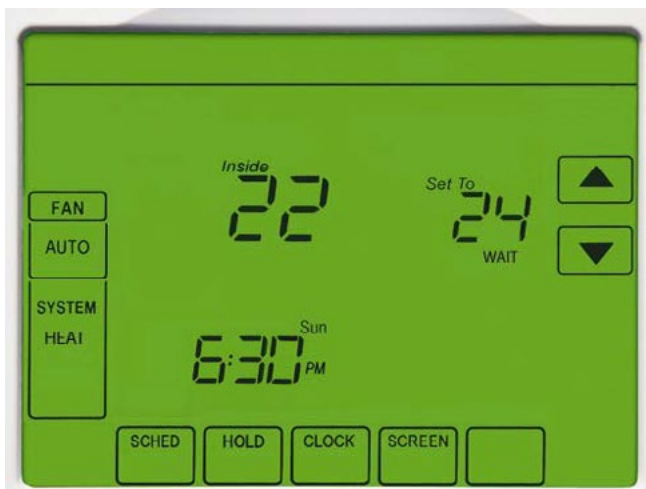

Step 2.

Temporarily set the temperature to higher than the current room temperature (example 24°C). **“WAIT”** will show in the lower right just below **“SET TO”** temperature display.

A faint “click” will be heard and the heat will come on. **“WAIT”** will now disappear and **“HEAT ON”** will appear.

(Note: on some systems there could be a 10-15 minute delay). Once you hear the fan running, you should feel warm air at the vent.

Additional troubleshooting tips:

- Press SYSTEM to set the system to HEAT. Make sure the temperature is set higher than the inside temperature.
- Check circuit breaker and reset if necessary.
- Make sure power switch at heating and cooling system is on.
- Make sure furnace door is closed securely.

If after these steps the heating does not come on, (could take anywhere from 5 to 15 minutes) please contact a representative at **1-866-813-2226**.

